peerless®

Installation and Assembly - Neck Security Fastener Pack for Philips Display Models: 26HFL5830D/27, 32HFL5860D/27, 37HFL5560D/27, 42HFL7580A/27, 42HFL5860D/27, 52HFL5580D/27

Model: MIS660

IMPORTANT! Read instruction sheet before you start installation and assembly.
Before you start make sure all parts listed are included with your product.

c UL us **This product is UL Listed. It must be installed by a qualified professional installer.**

Parts List

	Description	Qty.	Part #
A	M5 x 25 mm socket pin serreated washer head screw	4	510-1122
B	M6 x 20 mm socket pin serreated washer head screw	4	510-9554
C	5/32" (4mm) security allen wrench	1	560-9646
D	# 10 washer	4	540-9400
E	M6 x 8 mm socket pin screw	4	520-1255

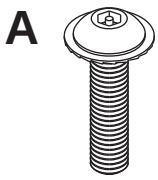

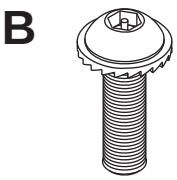

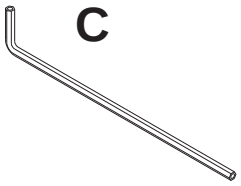

Some parts may appear slightly different than illustrated.

⚠ WARNING

- Do not overtighten! Overtightening may cause permanent damage to the screen. Torque to 26-35 in • lb (30-40 kg • cm).

1 Stand for 26" and 32" Screens

Slide screen onto base until holes align as shown in figure 1.1. Attach screen to stand using four M5 x 25 mm socket pin serrated washer head screws (**A**) and flat washers (**D**) as shown in figure 1.2. Tighten with 4 mm security allen wrench (**C**).

fig 1.1

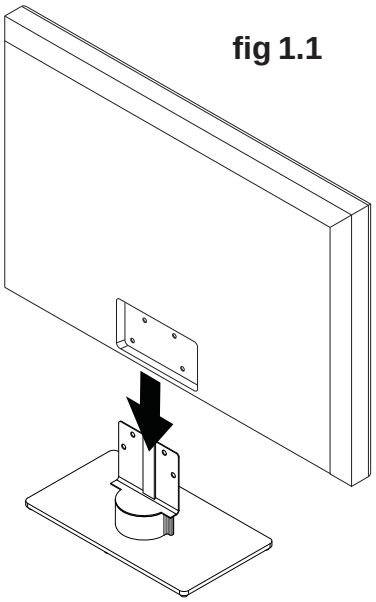

fig 1.2

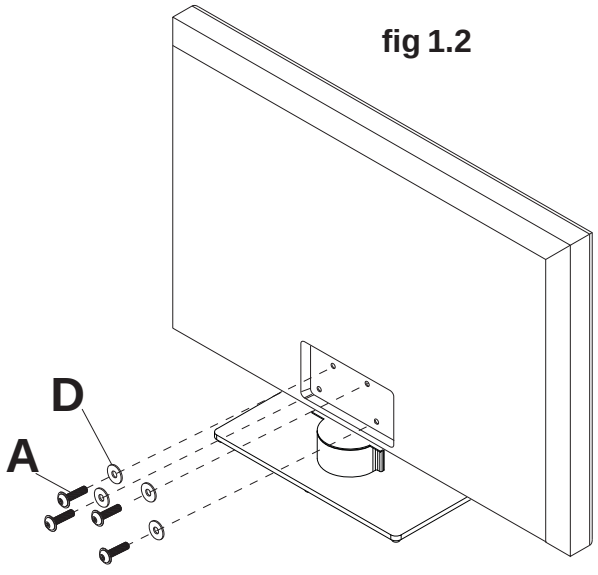

2 Stand for 37/52" Screens

Place screen adapter base on to base of stand and secure using four M6 x 20 mm socket pin serrated washer head screws (**B**) or four M6 x 8 mm socket pin screws (**E**).

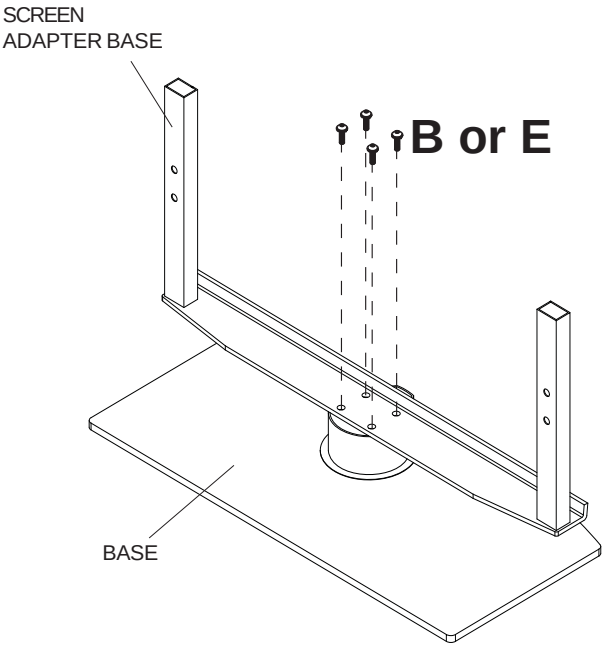

Slide adapter tubes into hole located on screen. Secure using two M5 x 25 mm socket pin serrated washer head screws (**A**) and washers (**D**).

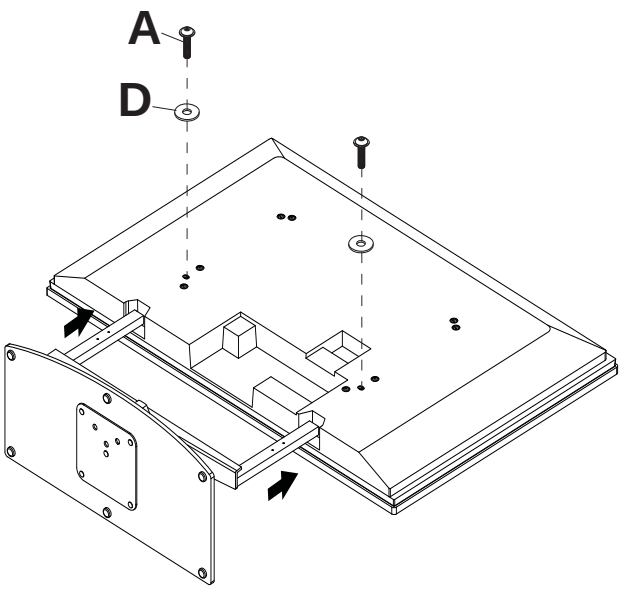

BASE MAY BE DIFFERENT
THAN ILLUSTRATED

© 2008, Peerless Industries, Inc. All rights reserved.
All other brand and product names are trademarks or registered trademarks of their respective owners.